
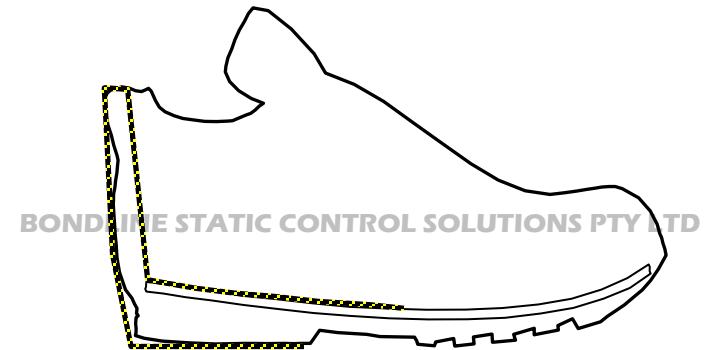


DISPOSABLE HEEL STRAP FITTING GUIDE

Part N^o: HSD-YB

- ❗ Disposable Heel Strap
- ❗ Self-adhesive end for attaching to heel base

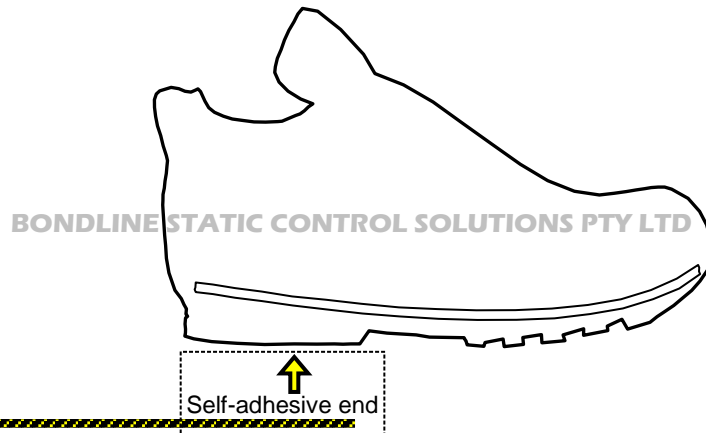

BONDLINE
STATIC CONTROL SOLUTIONS

BONDLINESTATIC CONTROL SOLUTIONS PTY LTD

- ❗ Ensure that the base of the heel is clean & dry.
- ❗ Peel the protective strip off the adhesive coating of the Disposable Heel Strap & apply directly along the centre line of the heel length.
- ❗ Smooth the ribbon up the back of the heel, roll over & down onto the inner sole of the shoe.
- ❗ When fitting the shoe on, ensure that the ribbon is laying flat & running between the sock & inner sole of the shoe.
- ❗ Test for continuity using a suitable "Footwear Tester", e.g. WST3, PGT120, PGT2000, etc.
- ❗ "Heel Straps" are an effective method of grounding when mobility is an issue, but only when used in conjunction with a "Grounded Floor".
- ❗ A strap on each foot is recommended, in order to ensure the best possible contact to ground when walking and standing.
- ❗ When sitting, Wrist Straps must be worn to ensure a continuous path to ground.

BONDLINESTATIC CONTROL SOLUTIONS PTY LTD

For help and advice please contact us on: Tel (02) 9757 3590 , Fax (02) 9757 3599 , Email info@bondline.com.au , Website www.bondline.com.au