


EPA Workstation Schematic for WKS2 Kit & Floor Mat

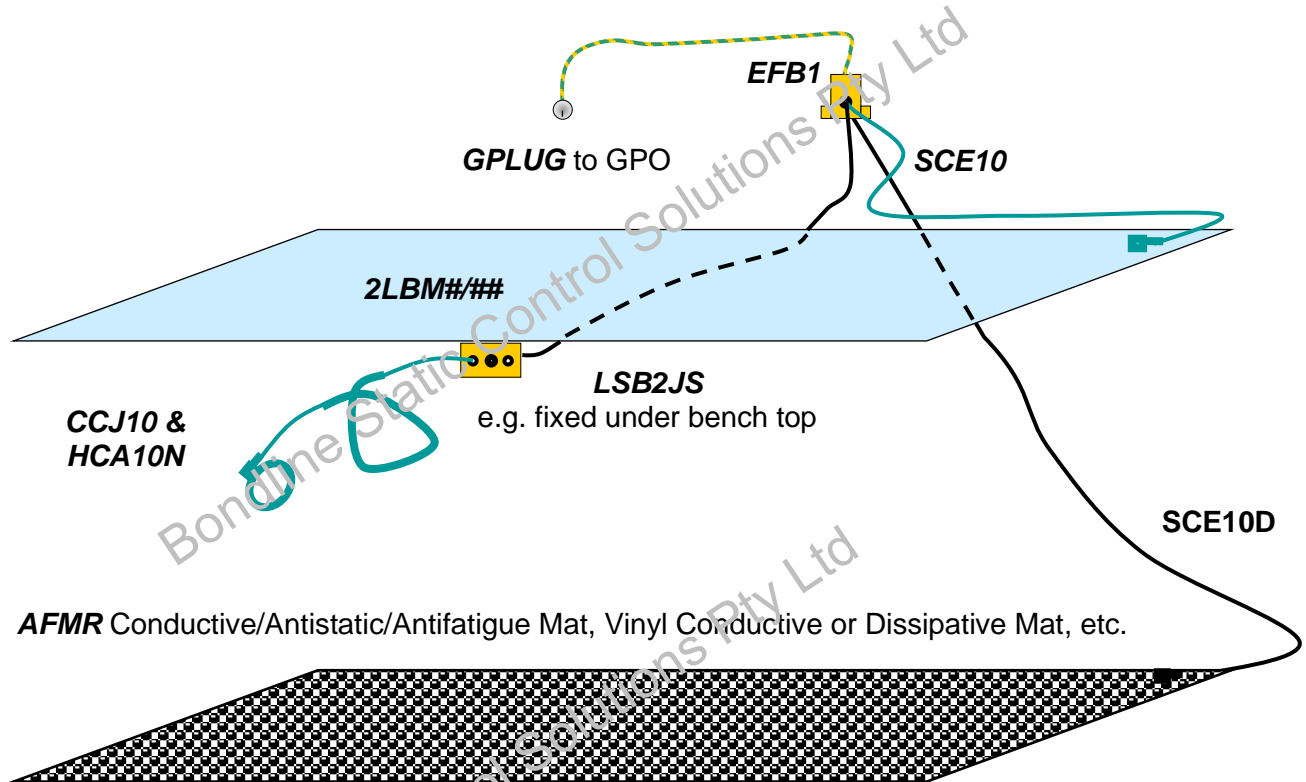

AFMR Conductive/Antistatic/Antifatigue Mat, Vinyl Conductive or Dissipative Mat, etc.

Each Mat includes at least 1 x 10mm male press-stud to enable connection of the SCE10/SCE10D.

One EFB1 can be used for more than one bench set-up.

Main benefits of utilising an EFB1 are:

- ✦ Highly visual & easy to test to / from for audit purposes
- ✦ One common point for connecting your mat, grounding points, shelving, etc.
- ✦ If the EFB1 loses its connection to Earth, you still maintain continuity between the Wrist Strap & the Matting
- ✦ Other wrist straps & coil cords are available, e.g. metal band, longer cord, etc.
- ✦ Bench mat is also available in custom sizes.

Cleaning 2LBM Bench Matting Materials

Regular cleaning with a static safe/antistatic approved solution e.g. ICSC Workstation Cleaner, is strongly recommended.

Surface cleaners available from us:

Part Number	
ICSC-32-ESD	Workstation & Mat Cleaner: 32oz (0.946 lt.), comes with spray pump
ICSC-GAL	Workstation & Mat Cleaner: US Gal. / 3.785lt, refill for ICSC-32-ESD

Please contact the office should you have any questions or wish to discuss your particular application.

V3-20